

# ORDER FORM - SLIDING DOOR + TRACK

## ORDER DETAILS

COMPANY :  
 ORDER REFERENCE :  
 ORDER RECEIVE CONTACT NAME :  
 CONTACT NUMBER :

DELIVERY ADDRESS :

*\*PICK ONE*  
 SELF-PICKUP  
 DELIVERY ONLY  
 INSTALL

## ORDER SPECIFICATION

ACCESS CODE ?

FRAME OPTION : *\*FRAME CODE*      *\*FRAME COLOUR CODE*

MODERN FRAME 11mm     SILVER FRAME     MATT BLACK FRAME     WHITE FRAME

CLASSIC FRAME 50mm     CUSTOM COLOUR FRAME

*\*Custom spray painting order*      *\*Write down the name of the colour and company of made.*

PANEL OPTION : *\*PICK PANEL CODE PER SET IN THE OVER TABLE BELOWM PANEL THICKNESS : 9MM, GLASS THICKNESS : 5MM*

   WHITE MELAMINE     COLOUR MELAMINE

*\*Write down the name of the colour and finish please.*

### AREA

E.g. Room 1

### HOW MANY DOOR?

E.g. 3 doors

### TRACK

*\*Tick to select*

Double

Triple

### FRAME OPTION

SL

SE

### FRAME COLOUR

### INFILL PANEL

*\*E.g. SW + SW or MIR + COL*

**\*Crucial Measurement is your finished opening (Inside Door Frame Measurement).**

## WIDTH (w)

- 1. TOP WIDTH MM
- 2. BOTTOM WIDTH MM

## HEIGHT (h)

- 3. LEFT HEIGHT MM
- 4. RIGHT HEIGHT MM

## FLOORING SITUATION (Pick one)

- SITUATION 1** TILE FLOOR  
BOTTOM TRACK ON EXISTING TILE
- SITUATION 2** WOODEN FLOOR  
BOTTOM TRACK ON EXISTING FLOOR
- SITUATION 3** NEW CARPET (YET INSTALLED)  
BOTTOM TRACK ON 9MM PACKER
- SITUATION 4** OLD CARPET (INSTALLED)  
BOTTOM TRACK ON 16MM PACKER  
*\*\$25.00 +G.S.T. EXTRA FOR PACKER*



W1




**STEP 1.** Use aluminium cutting blade to cut top and bottom running tracks when needed. Length of Top & Bottom running tracks are supplied by sizes given.



**STEP 2.** Pre-drilling top running track for screw fixing it to door jamb. Top running track should be flush with the front of door jamb.



**STEP 3.** Pre-drilling bottom running track for screw fixing it on floor. Bottom running track should be offset from the front of door jamb. Modern slim door profile will require 8mm offset from the front of door jamb, Classic square door profile will require 3mm offset from the front of door jamb

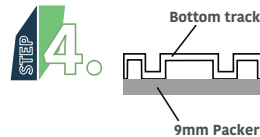

**STEP 4.** MDF packer will be supplied with bottom running track and this packer should be installed before laying new carpet to let bottom running track flush with carpet after finish.



**STEP 5.** After installing top and bottom running tracks, insert door into top running track first then tap door bottom wheels until wheels are aligned with bottom track to put wheels in.



**STEP 6.** Adjust door bottom wheels with 4mm Allen key until door is leveled. Clock-wise to tighten and raise bottom wheel.

NEW ORDER EMAIL TO :  
**SALES@NOVAINTERIOR.CO.NZ**  
 SELF-PICKUP ADDRESS :  
 UNIT 2 / 349 EAST TAMAKI RD, EAST TAMAKI 2013

W2

H3

H4